



## Overview

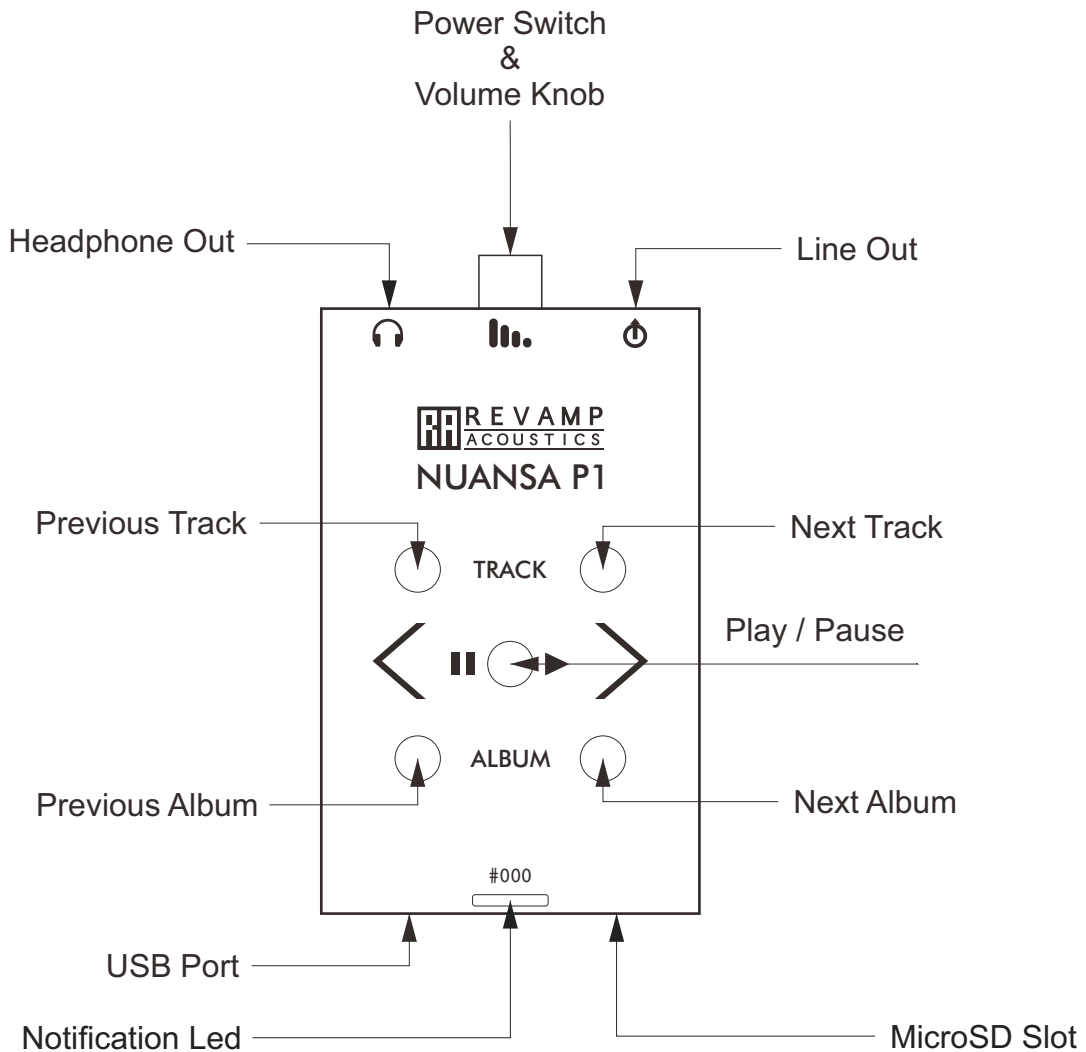


## Files and Folders Structure

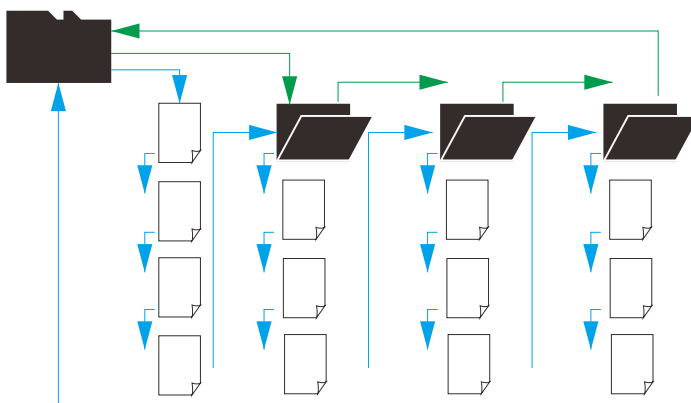


Using Next / Previous Track Button  
To jump among Files (Track)  
**Example with Blue Arrow**

Using Next / Previous Album Button  
To jump among Directory (Album)  
**Example with Green Arrow**

## Play Notification

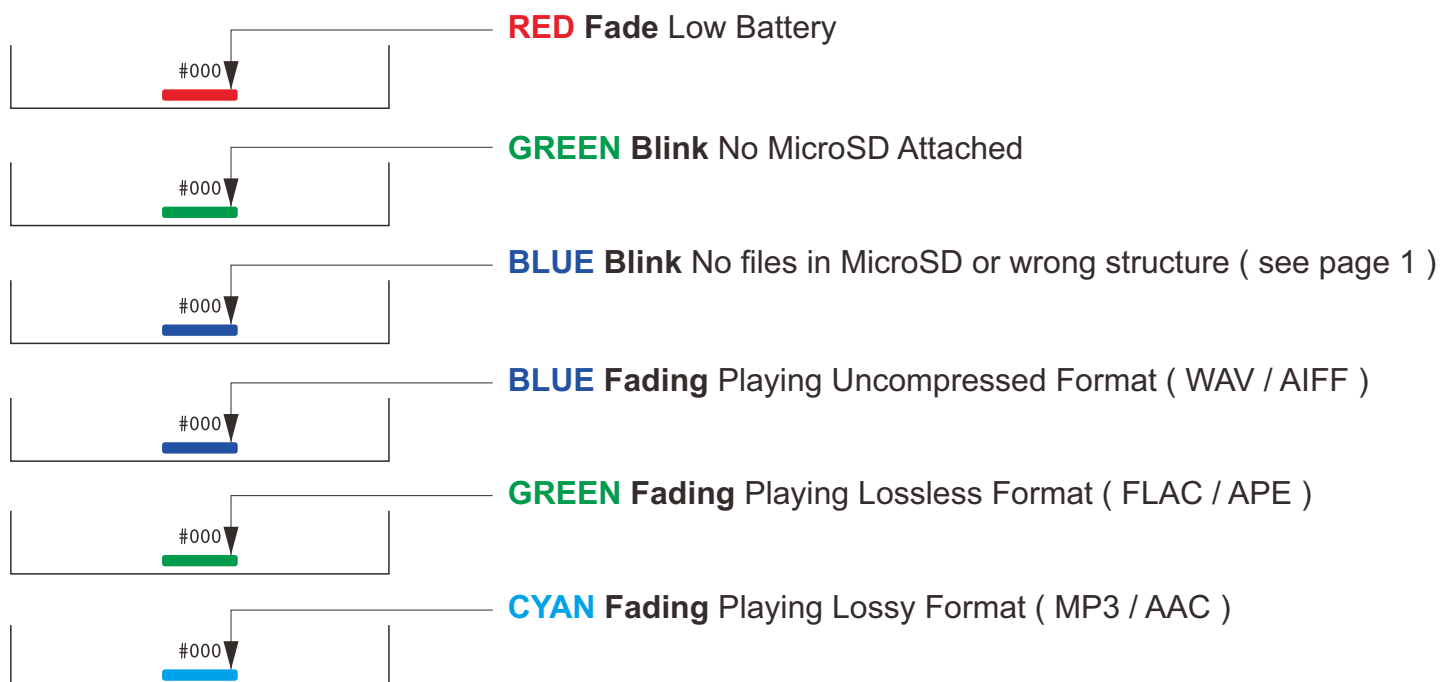

## Charging Notification

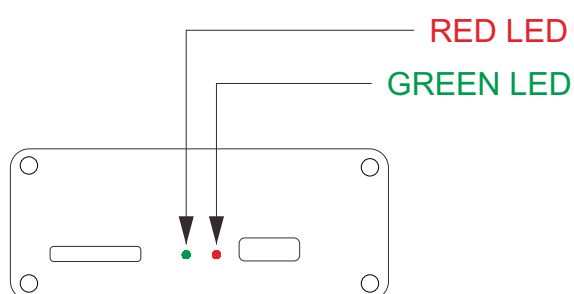

**RED ON GREEN OFF**  
Charging Started

**RED ON GREEN ON**  
Almost Finish

**RED OFF GREEN ON**  
Fully Charged

## Play Mode

### USB DAC

Hold Next Track while Power-On to enter USB Audio Mode

### RANDOM

Hold Prev Track while Power-On to activate Random playing

### RESET

Hold Prev Album while Power-On to reset saved last time played